


NOTICE DE MONTAGE ET D'UTILISATION


ASSEMBLY AND USAGE INSTRUCTIONS

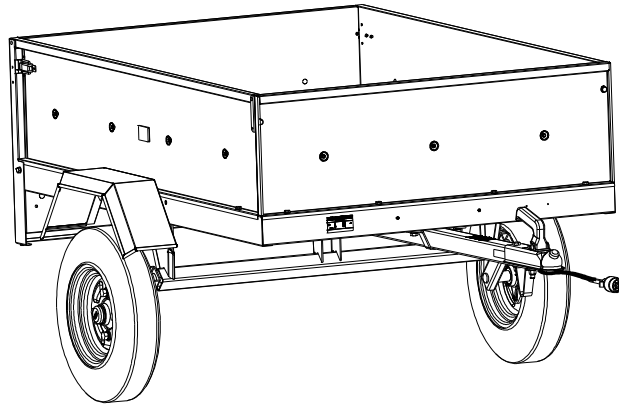

REMORQUE SX
TRAILER SX


COLIS/PACK

A

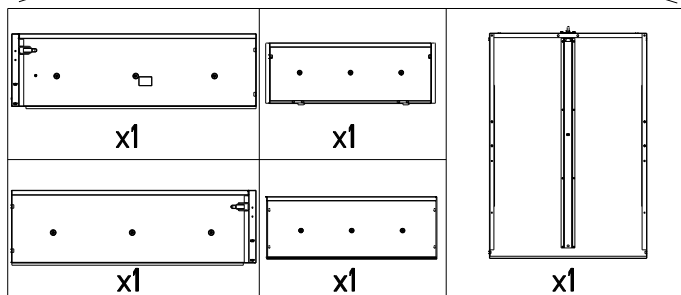


COLIS/PACK

B

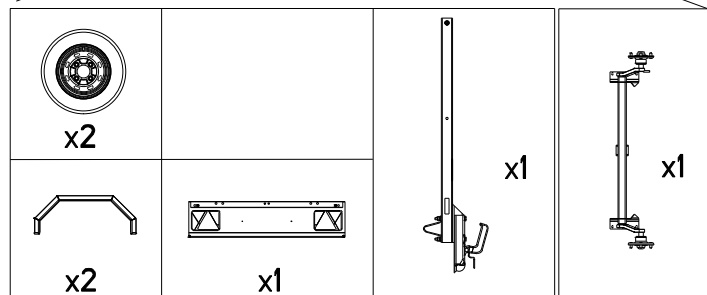


SACHET DE VIS / NUTS AND BOLTS CONTENT COLIS B

x6	x4	x12	x4	x2
HM 10x25	HM 8x25	HM 8x20	EQUERRE SQUARE	HM 6x12
x6	x8	x1	x2	
Ø 10	Ø 10	ETRIER	VIS M5	



PORTER DES GANTS POUR LE MONTAGE.
IT IS RECOMMENDED TO WEAR GLOVES
FOR ASSEMBLY.


OUTILS NECESSAIRES POUR LE MONTAGE NON FOURNIS
NECESSARY TOOLS FOR ASSEMBLY. NOT PROVIDED

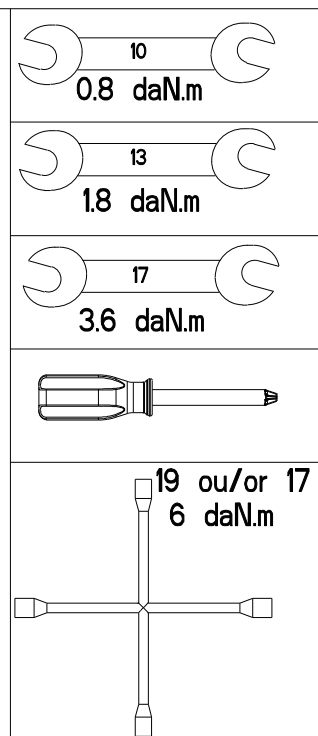

ERDÉ


WWW.ERDE.EU

A

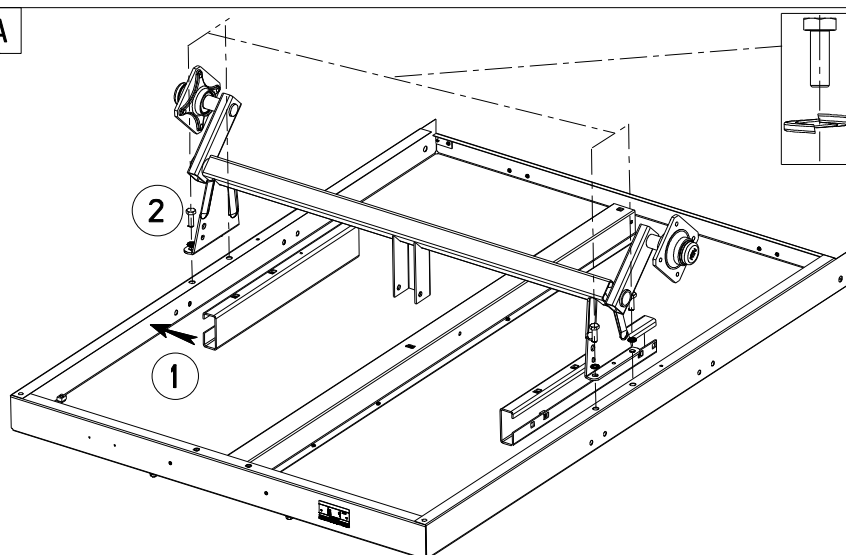


NE PAS BLOQUER LES FIXATIONS
DO NOT TIGHTEN NUTS AND BOLTS AT THIS STAGE

B


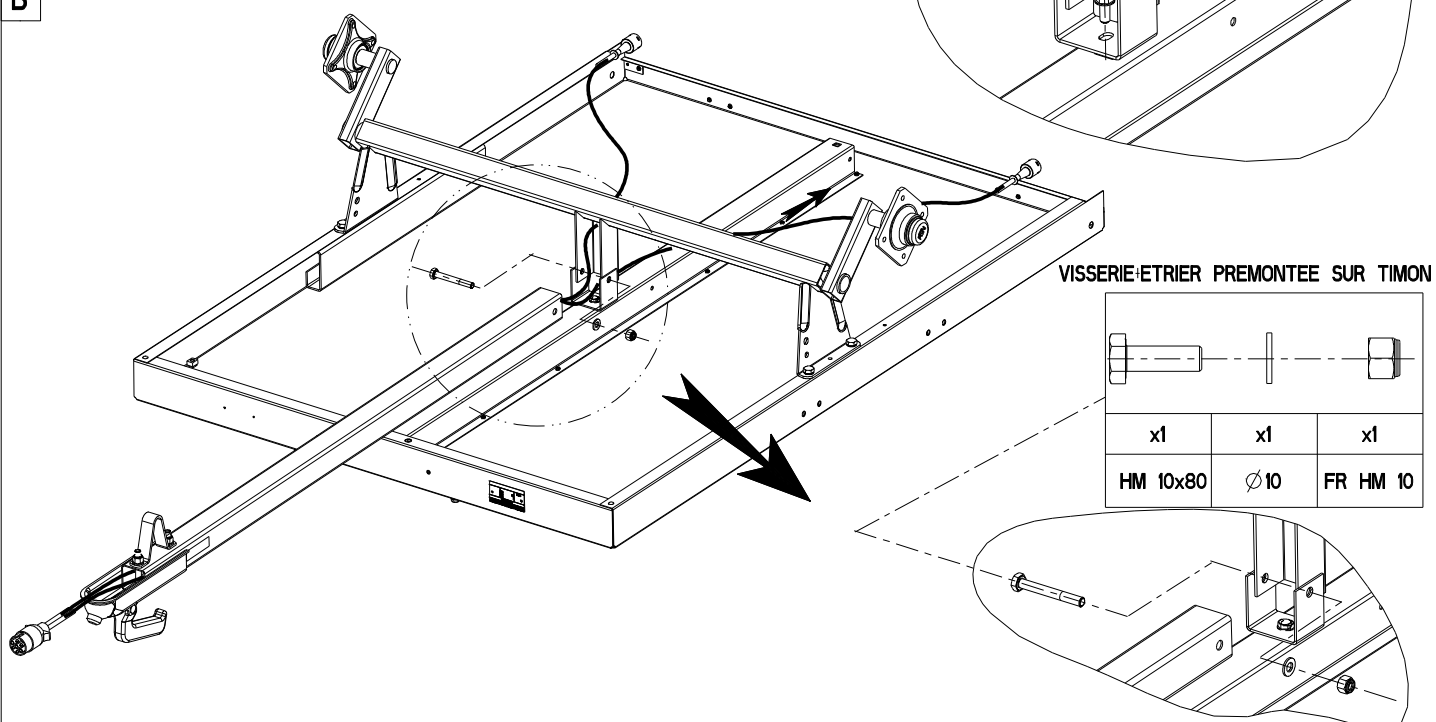


C



	x2	HM 10x25
	x2	Ø10

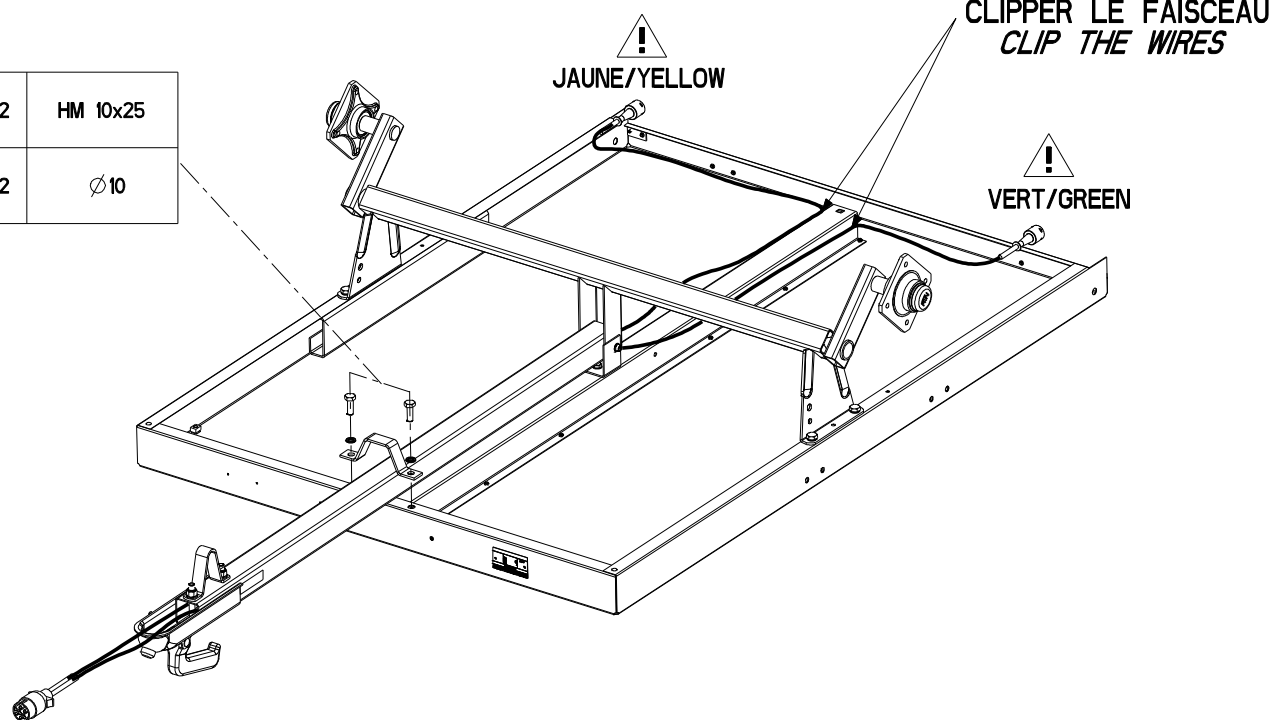

D

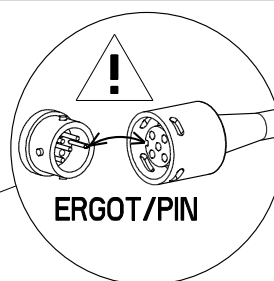

E


OU
/ OR

FACE BOMBÉE DE L'ECROU
CONTRE LA JANTE
DOMED HEAD AGAINST
THE WHEEL RIM

BLOQUER LES FIXATIONS APRES CETTE OPERATION




TIGHTEN ALL NUTS AND BOLTS AFTER THIS OPERATION

F RETOURNER LA REMORQUE
TURN OVER TRAILER ON TO ITS WHEELS

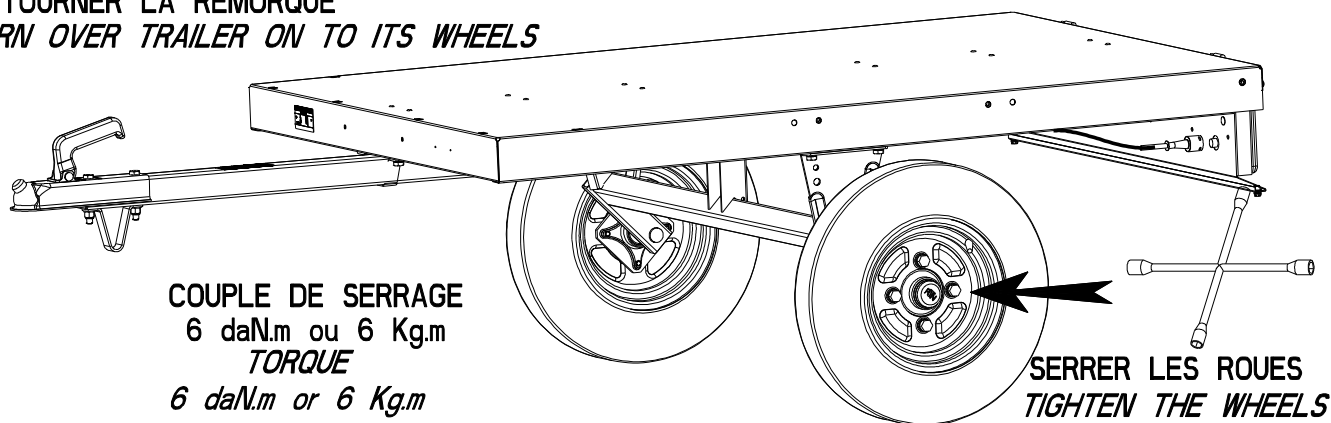


G


NE PAS BLOQUER LES FIXATIONS DES OPERATIONS SUIVANTES
DO NOT TIGHTEN THE NUTS AND BOLTS OF THE FOLLOWING STEPS





H

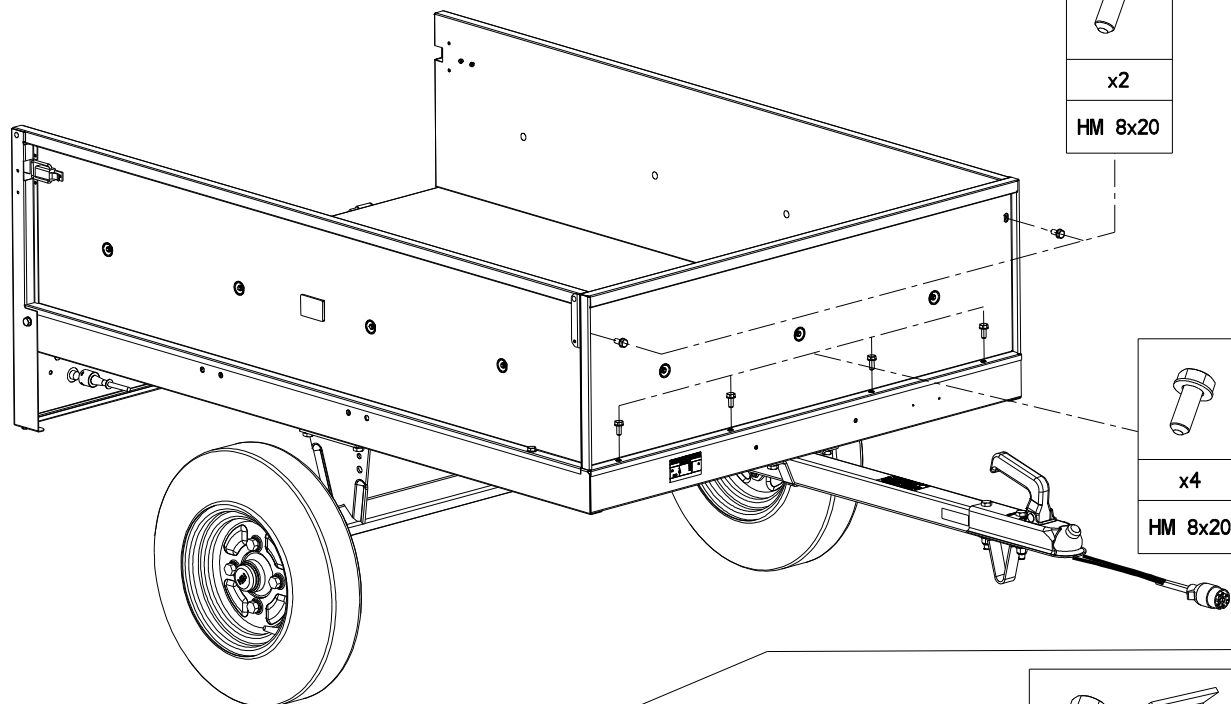

I

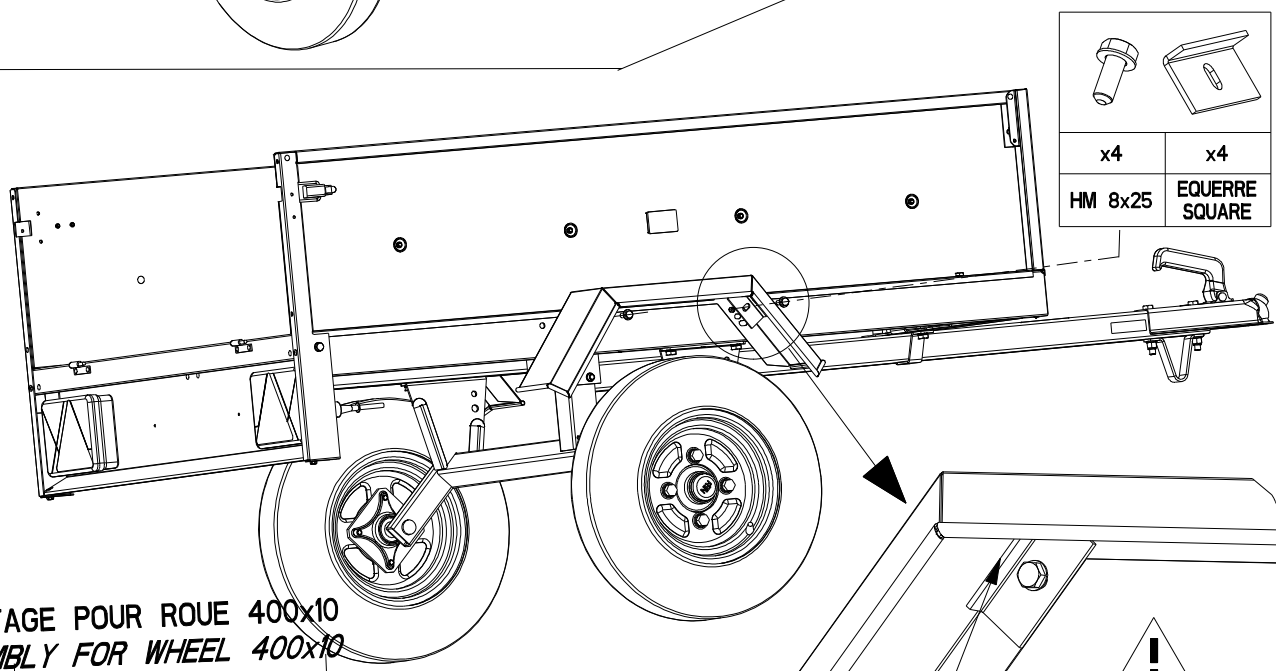


MONTAGE POUR ROUE 400x10
ASSEMBLY FOR WHEEL 400x10

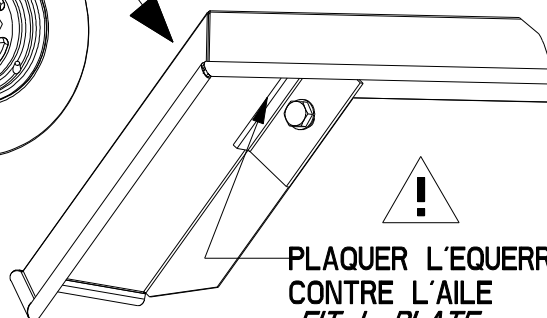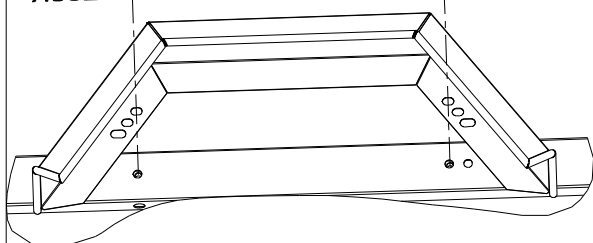

!
PLAQUER L'EQUERRE
CONTRE L'AILE
FIT L PLATE
AGAINST THE MUDGEARD

J

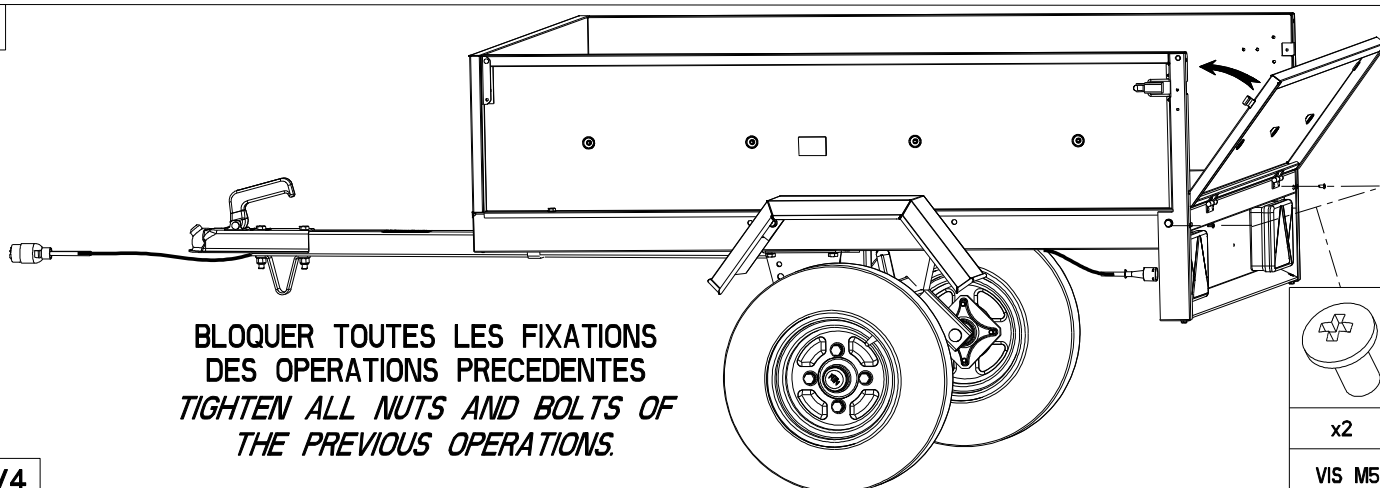

BLOQUER TOUTES LES FIXATIONS
DES OPERATIONS PRECEDENTES
TIGHTEN ALL NUTS AND BOLTS OF
THE PREVIOUS OPERATIONS.